

902 C

ClimAir[®]
ar comfort

(D) Einbauanleitung

(GB) Installation instructions






(F) Consignes de montage





(E) Instrucciones de montaje

(RUS) Инструкция по монтажу и установке



QR-Code - Einbaufilm Windabweiser
QR-Code - Fitting film wind deflector

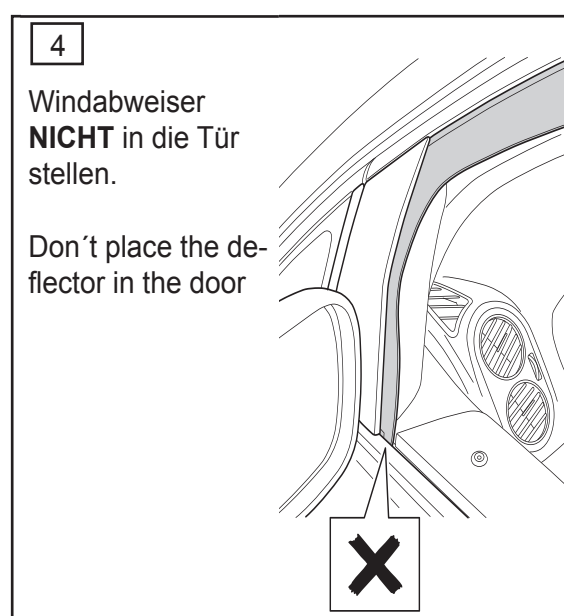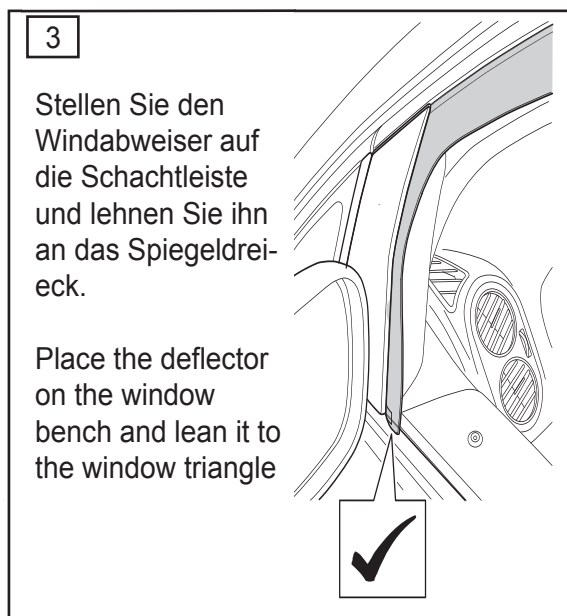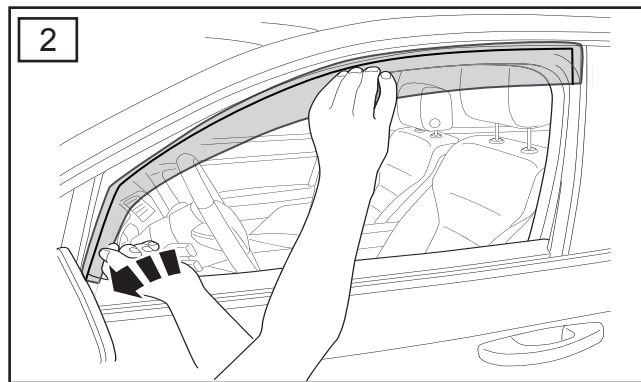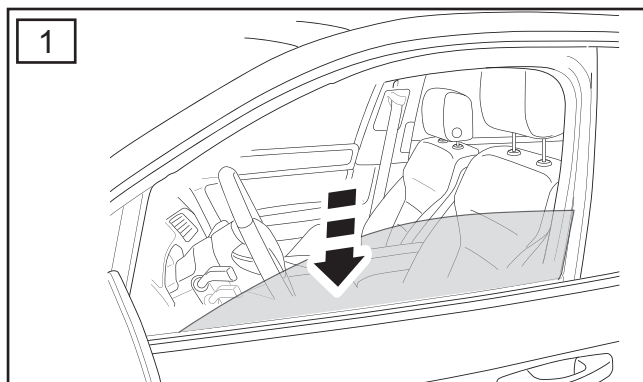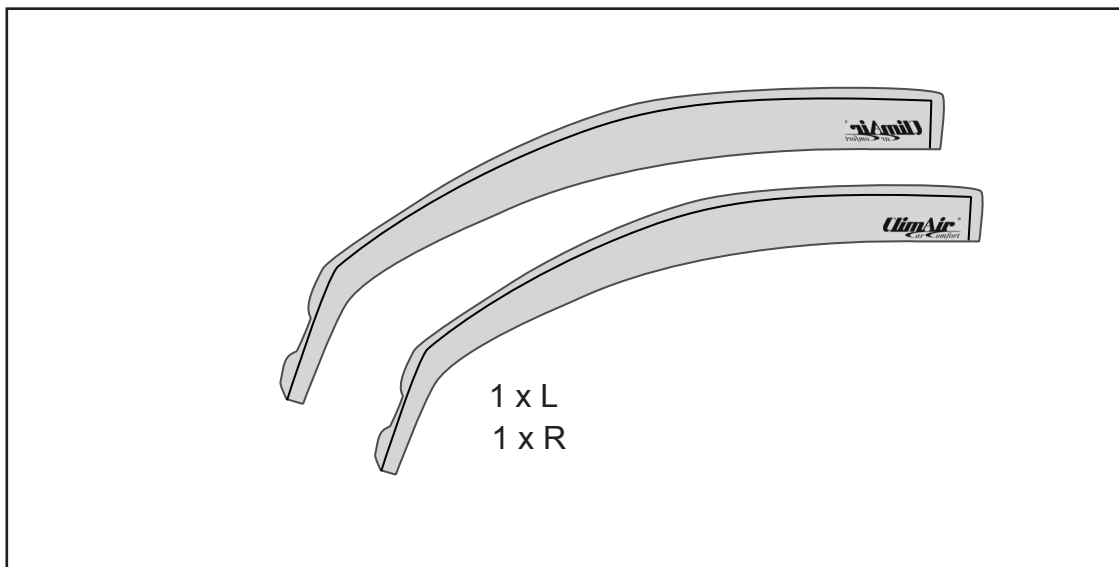

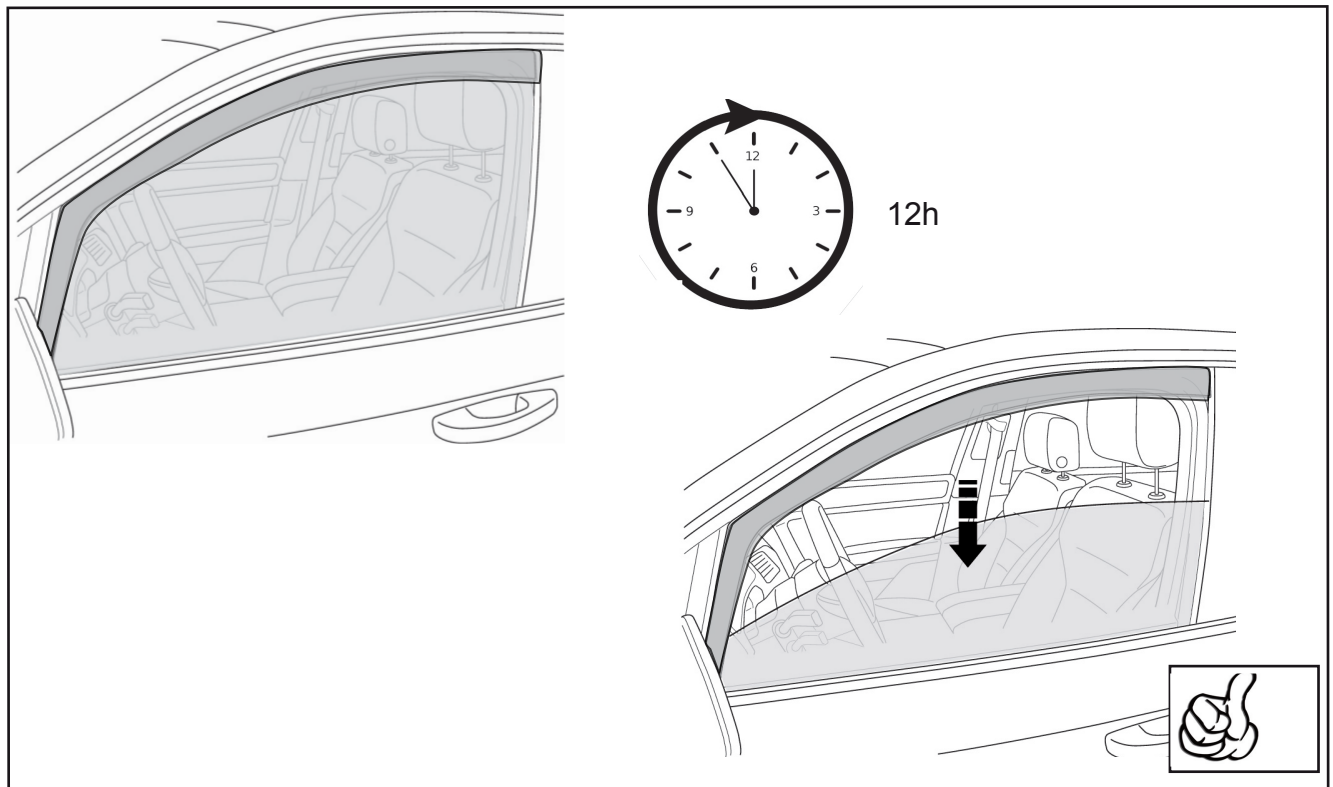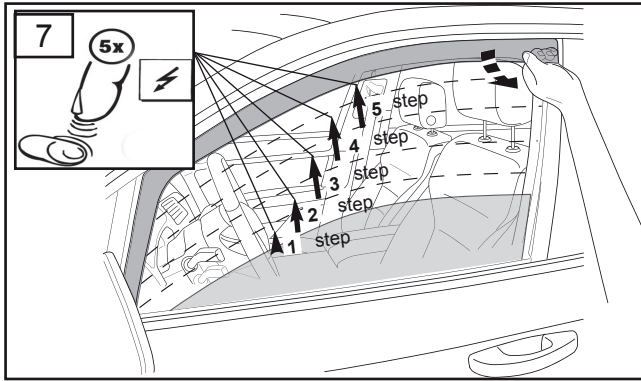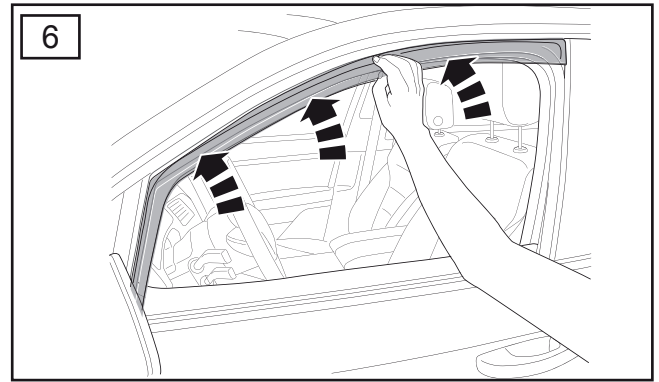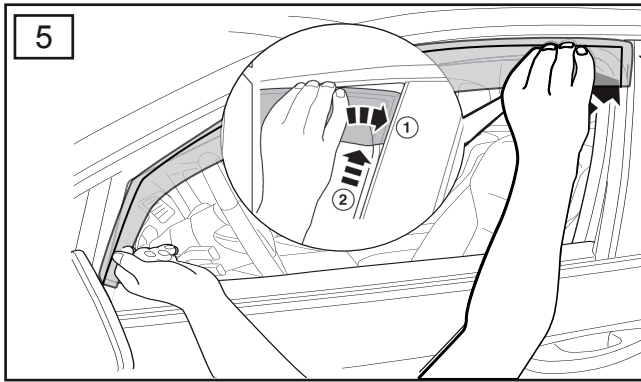

Weitere Informationen zum Einbau finden Sie unter:

For more information on installation, see:

Pour plus d'informations sur l'installation, voir:

Para obtener más información sobre la instalación, vea:

Для получения дополнительной информации по установке, см.:



www.climair.de/einbaufilm

Oder scannen Sie per Handy diesen QR-Code
Or scan this code with your mobile

ClimAir[®]
ar comfort

PLAVA Kunststoffe GmbH

Am Spitzacker 20-22 - 61184 Karben

Telefon: +49(0)6039 / 9 16 3-0

Fax: +49(0)6039 / 21 85

info@climair.de - www.climair.de